

Canon DSLR Cameras

	EOS 1Dx	EOS 1D / 1Ds	EOS 1D Mark II (N)	EOS 1Ds Mark II (N)	EOS 1D Mark III	EOS 1Ds Mark III	EOS 1D Mark IV	EOS 5D	EOS 5D Mark III	EOS 5D Mark II	EOS 6D	EOS 7D	EOS 10D	EOS 20D	EOS 30D	EOS 40D	EOS 50D	EOS 60D	EOS 70D	EOS 100D	EOS 300D (Rebel X)	EOS 350D (Rebel XT)	EOS 400D (Rebel XTi)	EOS 450D (Rebel XSi)	EOS 500D (Rebel T1i)	EOS 550D (Rebel T2i)	EOS 600D (Rebel T3i)	EOS 650D (Rebel T4i)	EOS 700D (Rebel T5i)	EOS 1000D (Rebel XS)	EOS 1100D (Rebel T)	PowerShot G7 / G9 / G10	PowerShot G11	PowerShot S5 IS	PowerShot SX1 IS	PowerShot SX10 IS	PowerShot SX20 IS	PowerShot G1X	EOS M				
Nissin Model																																											
MG8000 Extreme	●		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○			
MF18	●		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○		
Di866 Mark II	●		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○		
Di866	○		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○			
Di700	●		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○		
Di600	●		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	
Di622 Mark II	●		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○		
Di622	○		○		○		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i40	●		●		●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○		
Di466	●		●		●		●	●	●	○	●	●	●	●	●	●	●	○	●	○	●	●	●	●	●	●	○	●	○	●	○	○	○	○	○	○	○	○	○	○	○	○	
Di28	○		○		○		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

- Compatible Model
- Firmware update is required
- Hi-Speed is not supported
- Hi-Speed & 2nd Curtain are not supported
- Wireless TTL Slave is not supported

Not yet tested

Nikon DSLR Cameras

	D1 / D1X / D1H	D2X	D2Xs	D2Hs	D3 / D3X	D3s	D4	D40 / D40X	D50	D60	D70 / D70s	D80	D90	D100	D200	D300	D300s	D600	D700	D800	D800E	D3000	D3100	D3200	D5000	D5100	D5200	D7000	D7100	Df	Coolpix A	Coolpix P5000	Coolpix P5100	Coolpix P6000	Coolpix P7700
--	----------------	-----	------	------	----------	-----	----	------------	-----	-----	------------	-----	-----	------	------	------	-------	------	------	------	-------	-------	-------	-------	-------	-------	-------	-------	-------	----	-----------	---------------	---------------	---------------	---------------

Nissin Model																																										
MG8000 Extreme				○		●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○		
MF18				○		●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○		
Di866 Mark II				●		●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○		
Di866				●		●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○	
Di700				○		●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○		
Di600				●		●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○		
Di622 Mark II				●		●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○			
Di622				○		●	○	○	●	●	●	●	●	○	●	●	●	○	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○		○	
i40				○		●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○		○			
Di466				●		●	○	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○		○	
Di28				●		●	○	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○		○	

- Compatible Model
- Firmware update is required
- FV Lock system does not work
- SD Mode Not Supported

Not yet tested

Sony DSLR Cameras

	Alpha 100	Alpha 200	Alpha 230	Alpha 290	Alpha 300	Alpha 330	Alpha 350	Alpha 380	Alpha 390	Alpha 450	Alpha 500	Alpha 550	Alpha 560	Alpha 580	Alpha 700	Alpha 850	Alpha 900	Alpha SLT A33	Alpha SLT A55V	Alpha SLT A57	Alpha SLT A65	Alpha SLT A77	Alpha SLT A99	NEX-6	NEX-7	RX1	
--	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	---------------	----------------	---------------	---------------	---------------	---------------	-------	-------	-----	--

Nissin Model

Di866 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○
Di622 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○

- Compatible Model
- Firmware update is required
- Firmware update is required + Use the Sony Shoe Adaptor (ADP-MAA)

Olympus Micro Four Thirds / Four Thirds Cameras															
	E-M1 (OMD)														
	E-M5 (OMD)														
	E-M10 (OMD)														
	E-P1														
	E-P2														
	E-P3														
	E-P5														
	E-PL1														
	E-PL2														
	E-PL3														
	E-PL5														
	E-PL6														
	E-PM1														
	E-PM2														
	E-3														
	E-5														
	E-30														
	E-410														
	E-420														
	E-450														
	E-500														
	E-510														
	E-520														
	E-620														
Nissin Model															
i40 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Panasonic Micro Four Thirds Cameras															
	Lumix GX1														
	Lumix GX7														
	Lumix GH-1														
	Lumix GH-2														
	Lumix GH-3														
	Lumix G-1														
	Lumix G-2														
	Lumix G-3														
	Lumix G-5														
	Lumix DMC-G6														
	Lumix G-10														
	Lumix GF-1														
	Lumix GF-2														
	Lumix DMC LX3														
	Lumix DMC LX5														
	Lumix DMC LX7														
	Lumix FZ-200														
Nissin Model															
i40 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

● Compatible Model